

## THE PM PARAMOTOR CONTAINER MD RANGE ASSEMBLY INSTRUCTION

1. Attach the handle (supplied with the p/m container) to the deployment bag containing your parachute. To do this thread the attachment strap through the center Loop formed by the webbing straps on the deployment bag. Pass the handle through the loop to form a larks head knot.





**2.** Lay the outer container on the table as shown ,  
Place the inner container on top of it so that the bridle  
loop now protrudes from under the inner container and  
the deployment handle attachment strap is on top as  
shown.




**3.** Thread a pull cord through the closing loop located  
on flap #1



**4.** Thread the pull cord through each grommet (eyelet) Located on each flap according to their order (2, 3, 4).



**5.** Lock the container by pulling the loop through the last eyelet with the pull cord and pass the curved locking pin through the closing loop. Carefully remove the pull cord by slipping it under the pin and pull it out slowly so as not to damage or burn the closing loop.

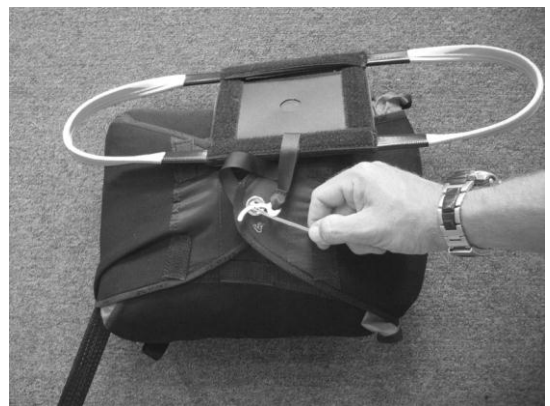



**6.** Finally attach the deployment handle to the container by placing the handle on the Velcro attachment located on the front of the container. (The deployment handle can be attached lengthwise or widthwise to the container as appropriate for your frame/engine.) and neatly arrange the corners of the container around the parachute.



**Before each flight it is highly recommended to verify that the locking pin is secure in its place using the transparent plastic window.**



**IMPORTANT NOTE**

**Assembly of the p/m container on your particular frame and to your harness  
Must be done in conjunction and consultation with your p/m manufacturer.**